





The material used for the impressions must be high viscosity silicone. A mixing-tip style material will result in poor fit because it is low viscosity and doesn't capture ear compression.




For best fit, make open-mouth impressions by using a 1-2" bite block. Custom In-Ear Monitors require a complete mold of the ear without large voids or bubbles. Please see details below.

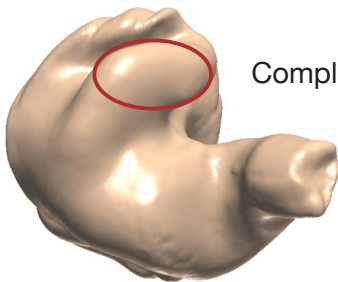


Complete cymba area

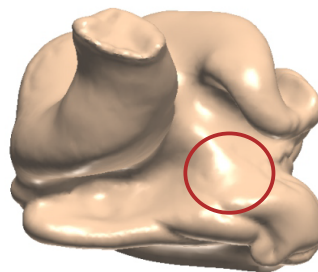

Extra material around connector area

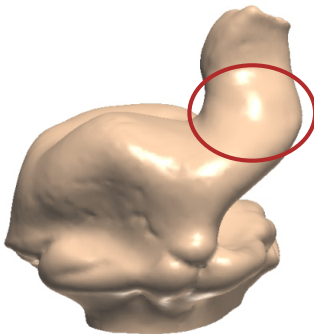

Canal must go past first bend

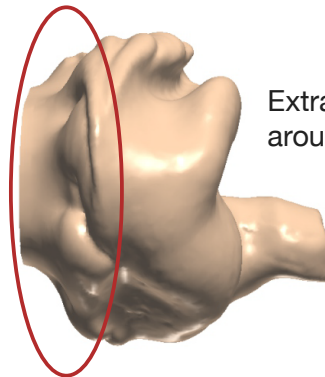

Extra material and depth around outer ear

- 1 Take at least 3 photos (from different angles) of your impressions and email them to info@bellosaudio.com for approval. In case your impressions need to be remade, this step will save you lost time and extra shipping fees.
- 2 Once your ear impressions are approved over email, it's time to mail them to Bellos Audio. Make sure to include your name, email address, and phone number with your shipment. Mail your impressions to:

Bellos Audio
3511 Gallatin Pike, Ste 209
Nashville, TN 37216

STL

We accept digitally scanned impressions in STL file format. Email them to info@bellosaudio.com and include photos of the physical impressions as a reference (if you have them).